

READ THIS FIRST

AlphaEclipse[™] PureColor[™] 3600 Signs Master/Slave Configuration

http://www.adaptivedisplays.com/support/eclipse

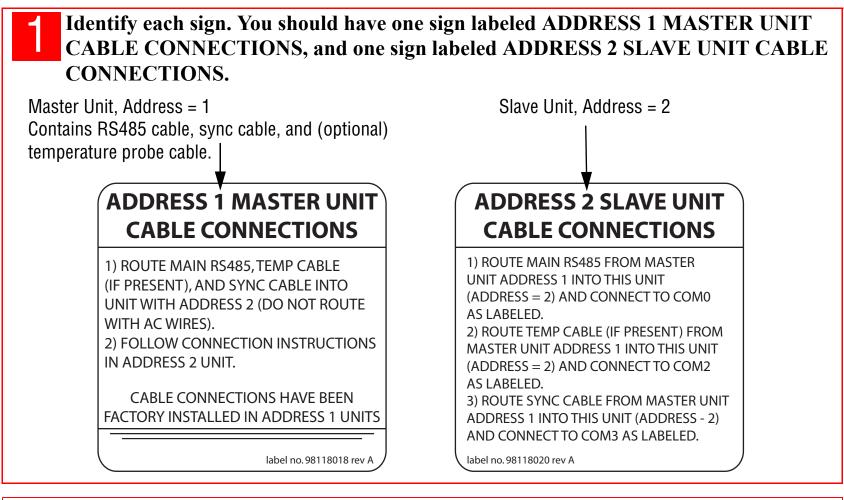

Open the wireway of the sign labeled ADDRESS 1 MASTER UNIT CABLE CONNECTIONS and locate the RS485 cable, the sync cable, and the (optional) temperature probe cable.

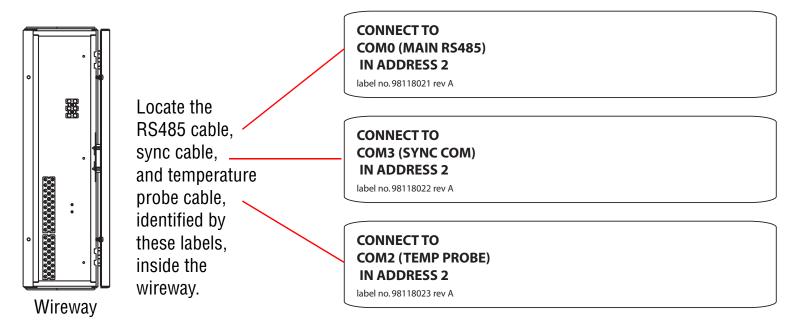


2

2


Run the RS485 cable, the sync cable, and the (optional) temperature probe cable out




of the wireway through the communications conduit opening and close the wireway.

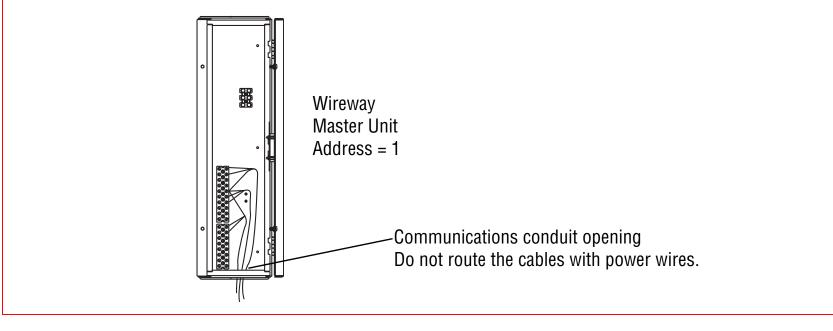

Open the wireway of the sign labeled ADDRESS 2 SLAVE UNIT CABLE CONNECTIONS and run the RS485 cable, the sync cable, and the (optional) temperature probe cable through the communications conduit opening.

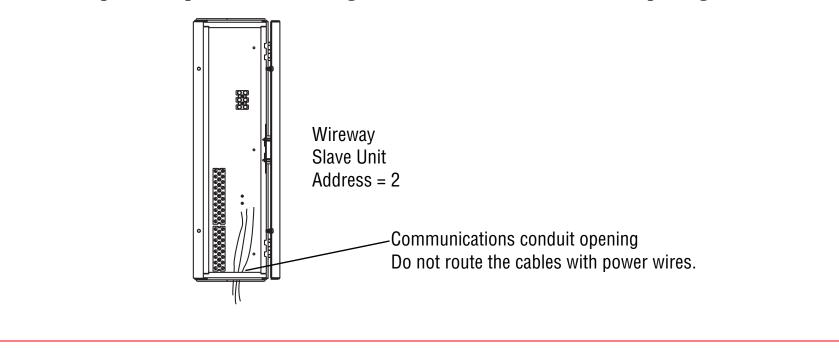

Connect the RS485 cable, the sync cable, and the (optional) temperature probe cable as shown.

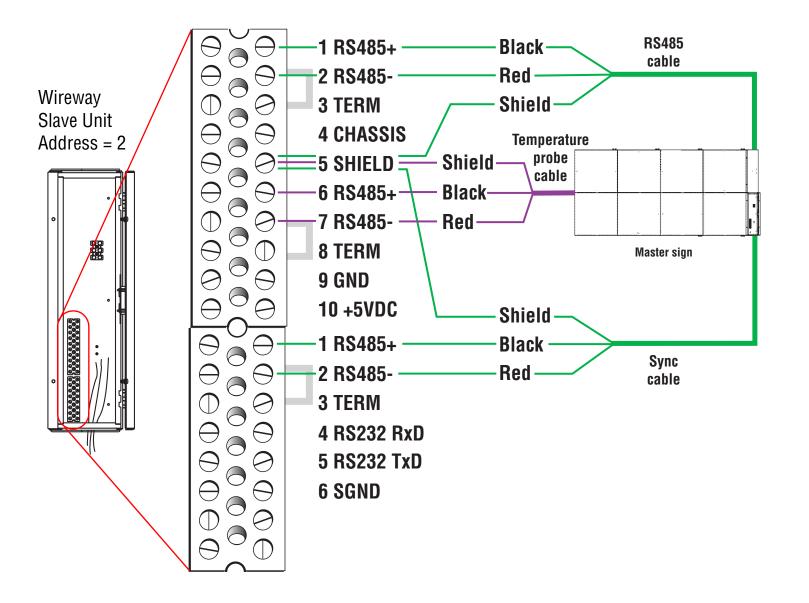

4

5

Connect the signs to the desired interface according to the AlphaEclipse[™] PureColor[™] 3600 Sign Installation Manual (pn 9711-8011).

© Copyright 2003 Adaptive Micro Systems, Inc. All rights reserved. Adaptive Micro Systems • 7840 North 86th Street • Milwaukee, WI 53224 USA • 414-357-2029 • 414-357-2029 (fax) • http://www.adaptivedisplays.com The following are trademarks of Adaptive Micro Systems: Adaptive, Alpha, AlphaNet plus, AlphaEclipse, AlphaPremiere, AlphaTicker, AlphaVision, AlphaVision InfoTracker, Automode, BetaBrite, BetaBrite Director, BetaBrite Messaging Software, Big Dot, PPD, Smart Alec, Solar, TimeNet The distinctive trade dress of this product is a trademark claimed by Adaptive Micro Systems, Inc. Due to continuing product innovation, specifications in this manual are subject to change without notice.

July 11, 2003

0

9711-8007