

READ THIS FIRST

ADAPTIVE®


AlphaEclipse 2500/2600/3500 Signs Multiple Master Configuration

<http://www.adaptivedisplays.com/support/eclipse>


- 1** Locate the SERIAL ADDRESS label on the back of each sign.
The SERIAL ADDRESS number will increase by one for each sign (1, 2, 3, and so on):



- 2** Open the sign with SERIAL ADDRESS = 1.
Locate the 30-foot Serial I/O cable in the lower left side of the sign.

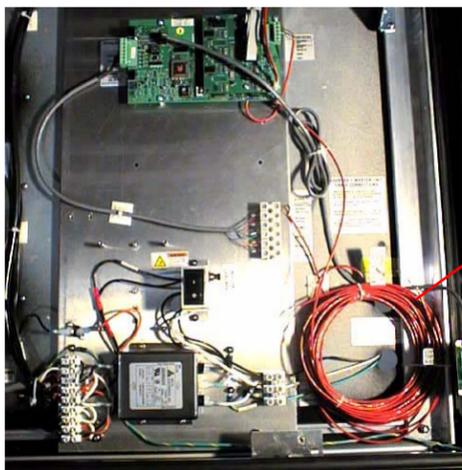


Serial I/O cable

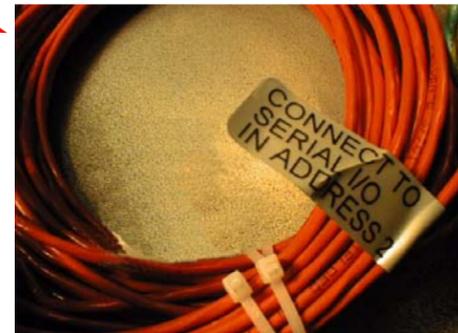

- 3** Run the Serial I/O cable out through the sign's communications conduit opening.
Then close the sign.

NOTE: Do *not* route the Serial I/O cable in the same conduit as the power wires.

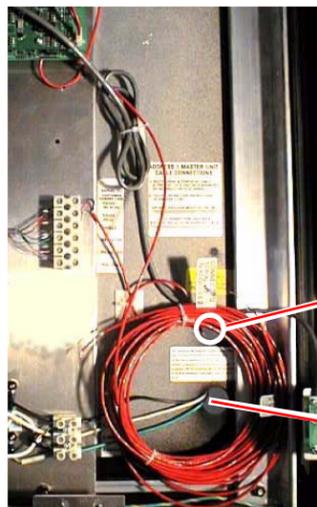

Communications conduit opening


Power wires

- 4** Open the sign labeled with SERIAL ADDRESS = 2.
Using the communications conduit opening, run the Serial I/O cable between the two signs.

- 5** Connect the signs as shown on the next page.

- 6** Repeat steps 3, 4, and 5 for each remaining sign.

Connect the signs as shown below:

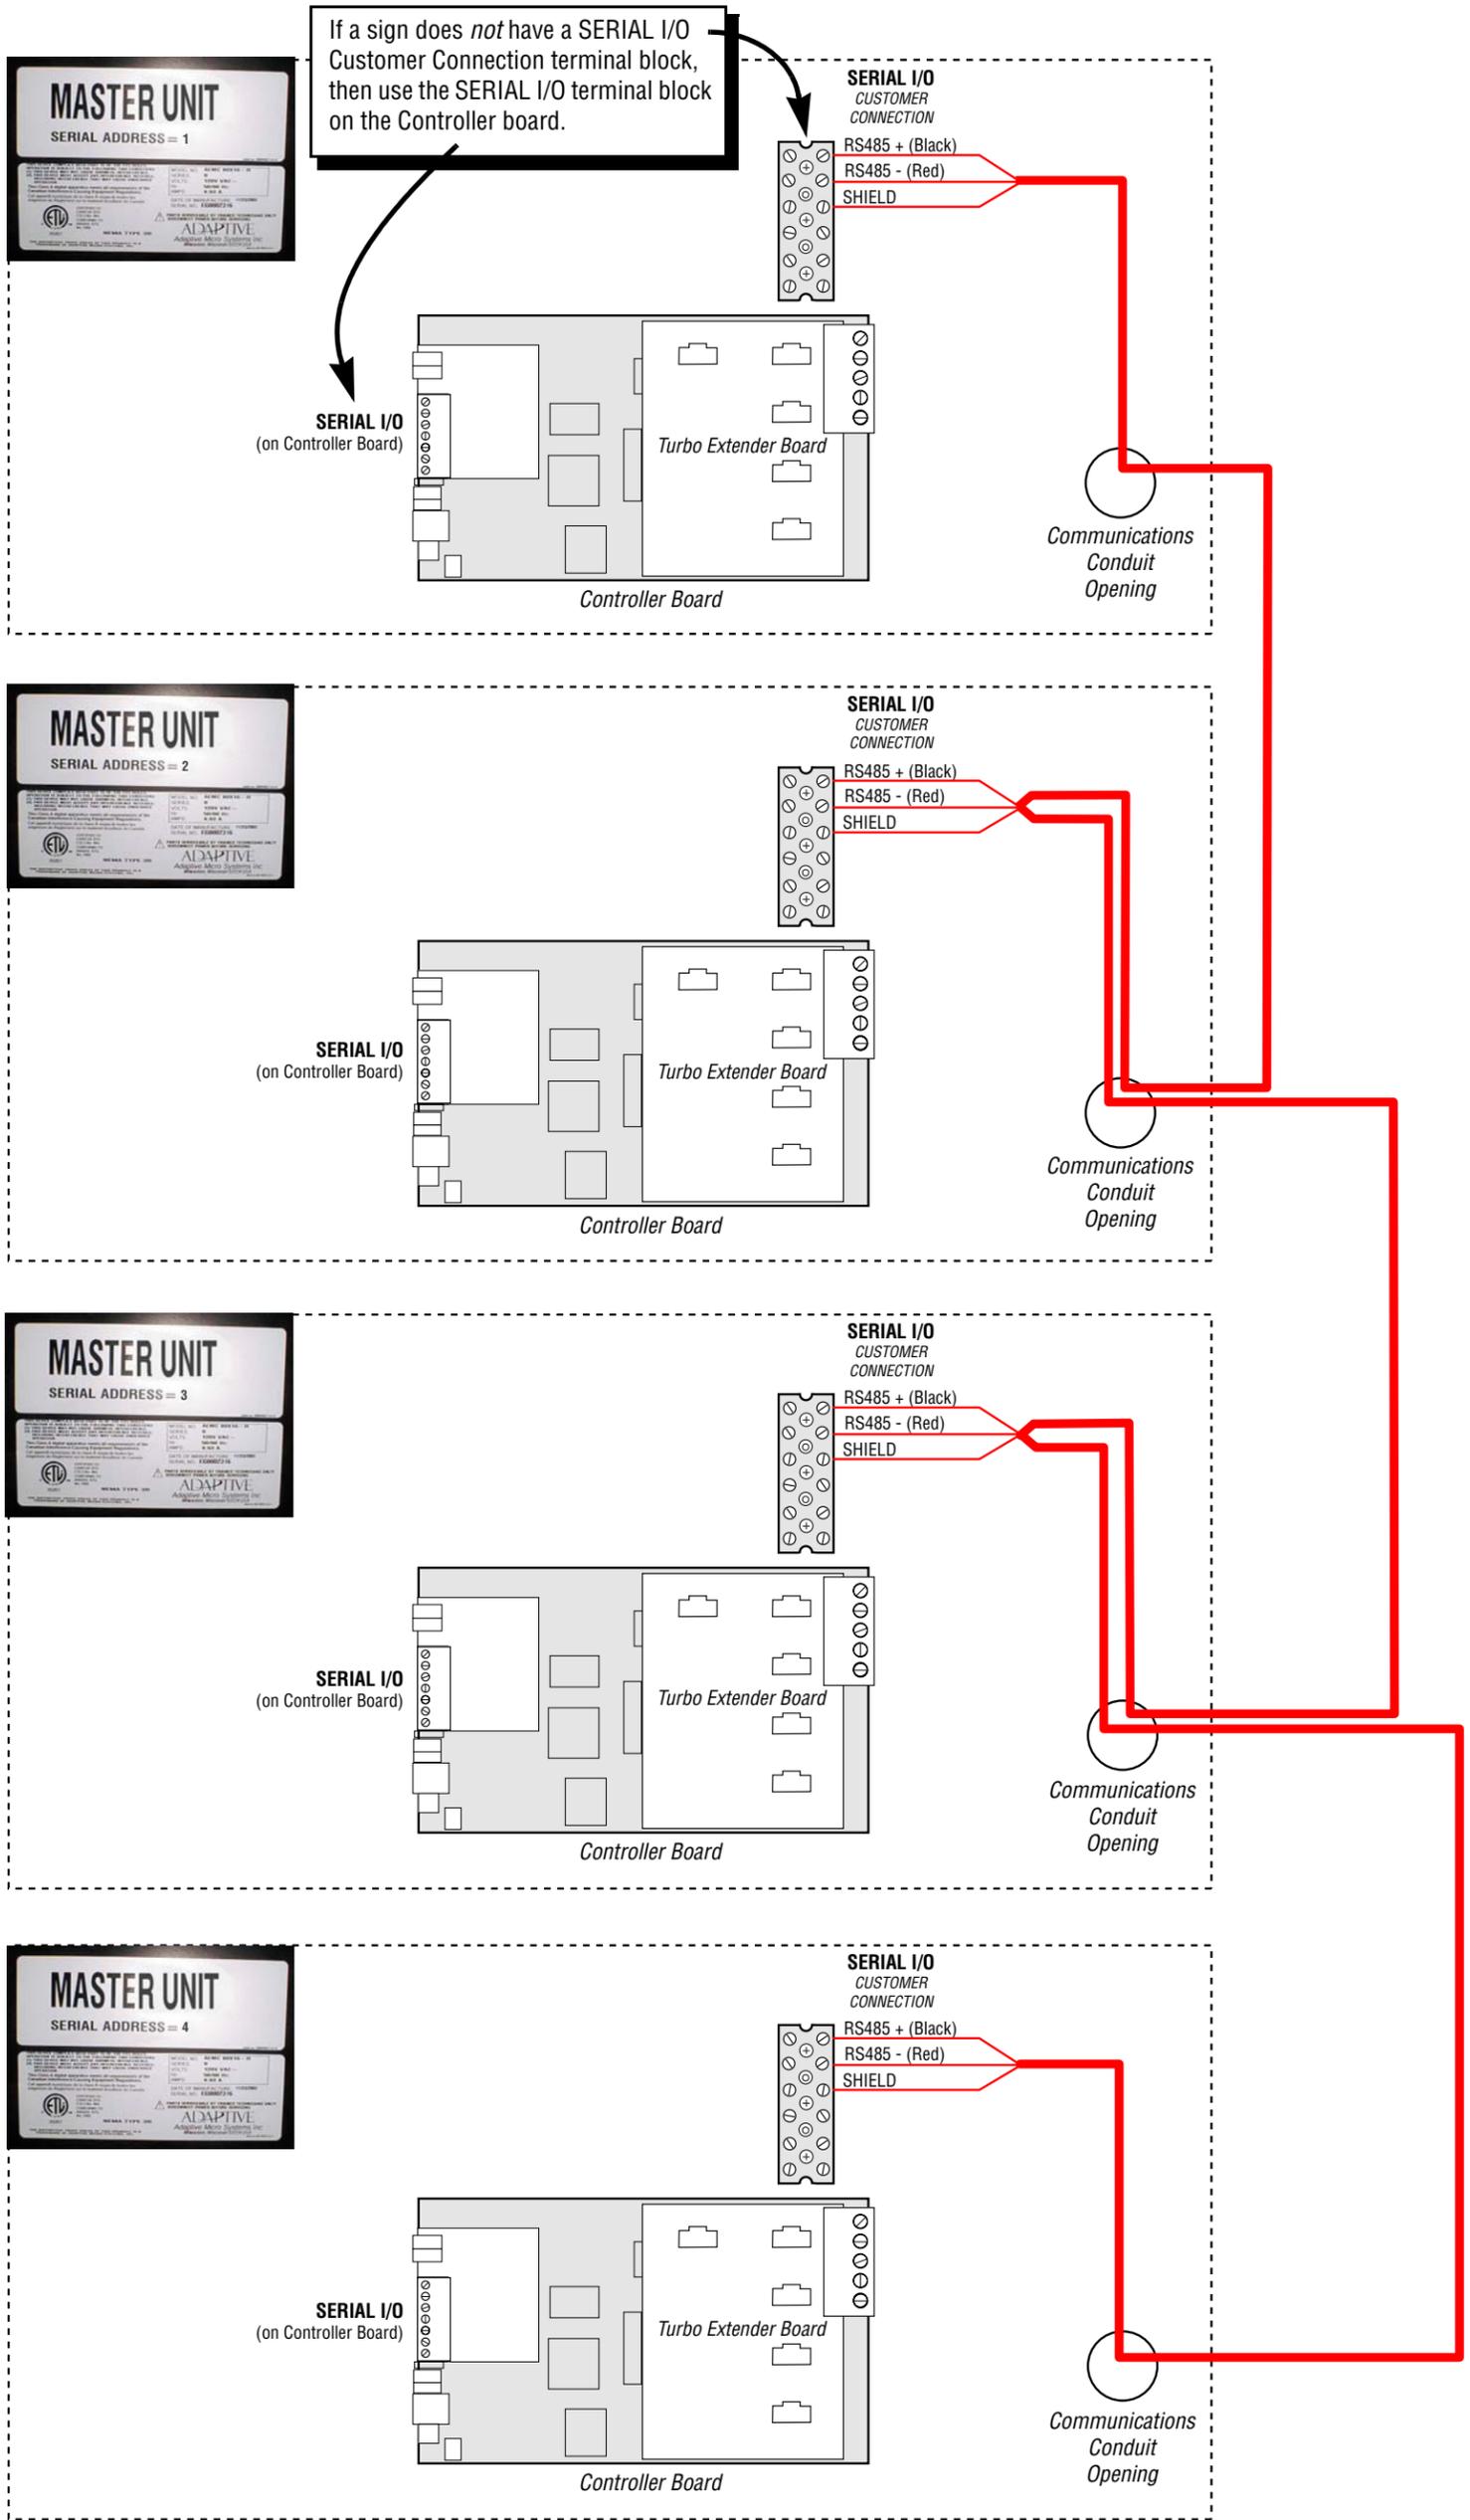

© Copyright 2003-2004 Adaptive Micro Systems LLC. All rights reserved.

Adaptive Micro Systems • 7840 North 86th Street • Milwaukee, WI 53224 USA • 414-357-2020 • 414-357-2029 (fax) • <http://www.adaptivedisplays.com>

The following are trademarks of Adaptive Micro Systems: Adaptive, Alpha, AlphaNet plus, AlphaEclipse, AlphaPremiere, AlphaTicker, AlphaVision, AlphaVision InfoTracker, Automode, BetaBrite, BetaBrite Director, BetaBrite Messaging Software, Big Dot, PPD, Smart Alec, Solar, TimeNet

The distinctive trade dress of this product is a trademark claimed by Adaptive Micro Systems LLC.

Due to continuing product innovation, specifications in this manual are subject to change without notice.